



# ISVEA

1962 ITALIA

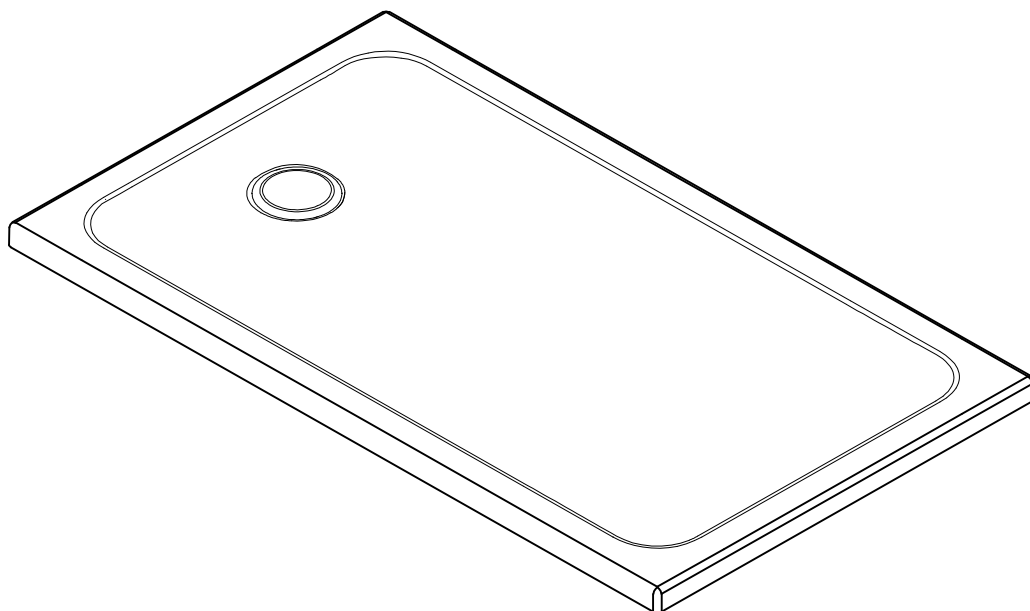


## FLAT SHOWER TRAY ASSEMBLY INSTRUCTIONS

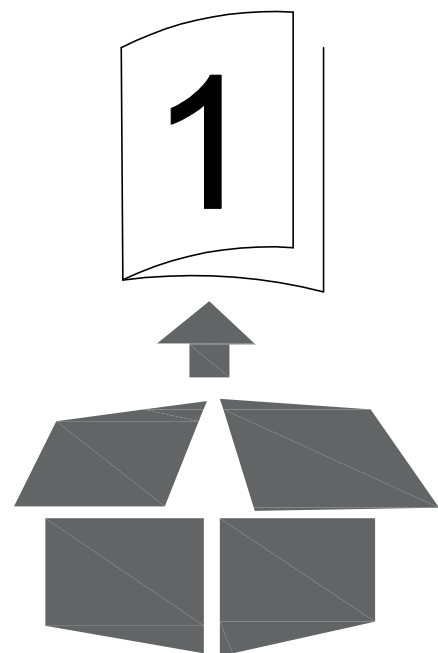

**EN Contents**  
**DE Inhalt**

**IT Contenuti**  
**RUS Содержание**

**TR İçindekiler**

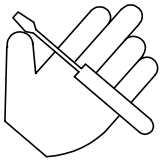

**Assembly**

**2**

**EN Assembly**

**2**

**IT Montaggio**

**2**

**DE Installation**


**2**

**RUS Сборка**

**2**

**TR Montaj**

**2**

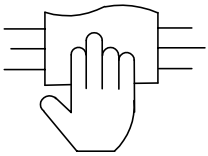

**Care**

**8**

**EN Care**

**8**

**IT Cura**

**8**

**DE Pflege**






**8**

**RUS Уход**


**8**

**TR Bakım**

**8**

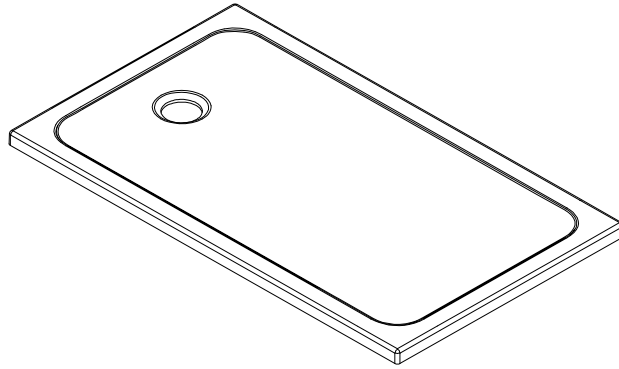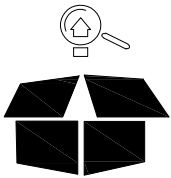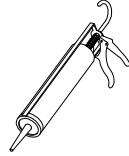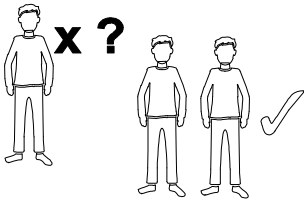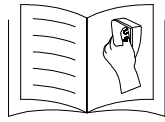


(01) x 1



(02) x 1



(03) x 1



(04) x 1



(05) x 1



(06) x 1



(07) x 1



(08) x 1

---




EN Assembly  
DE Installation


IT Montaggio  
RUS Сборка

TR Montaj


**01**



(01) x 1

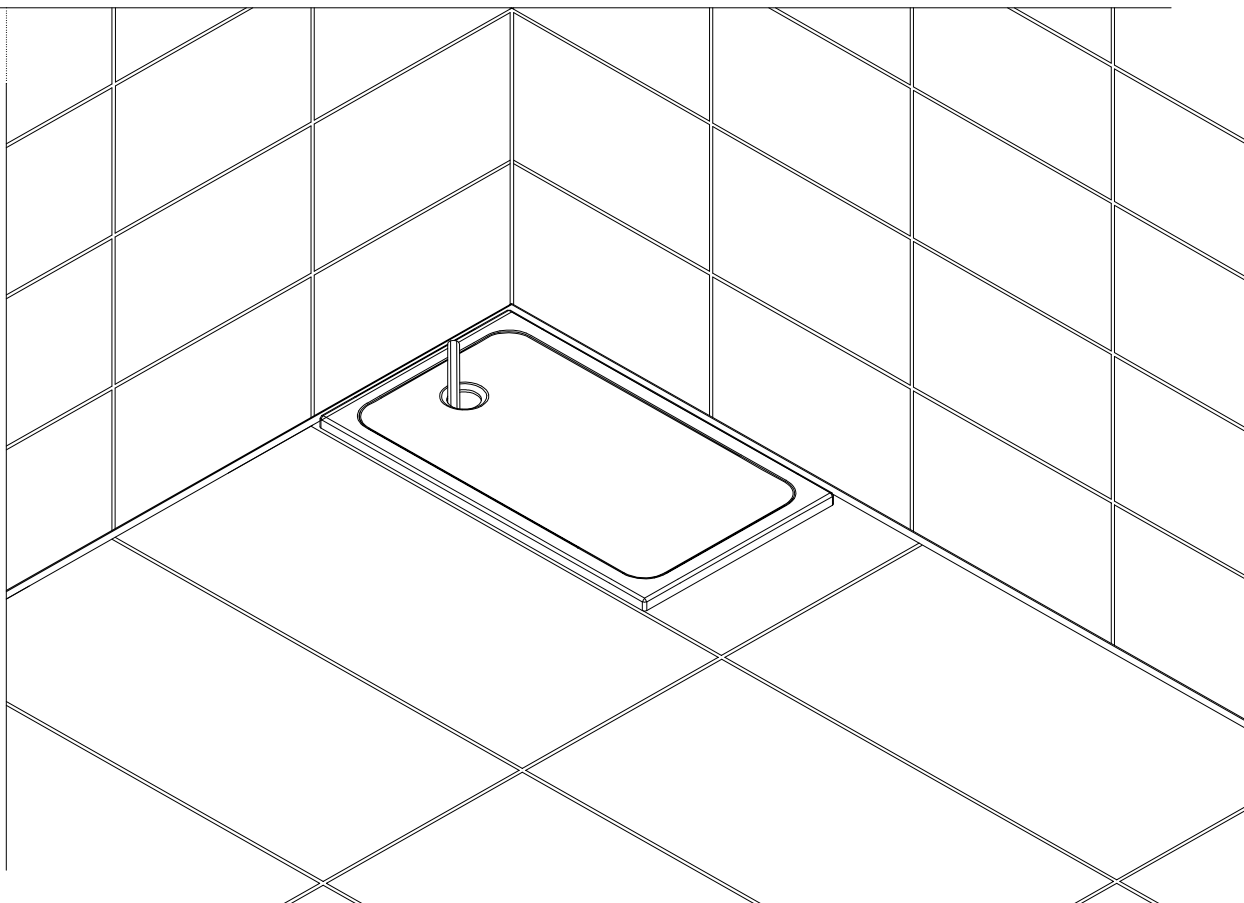

**02**

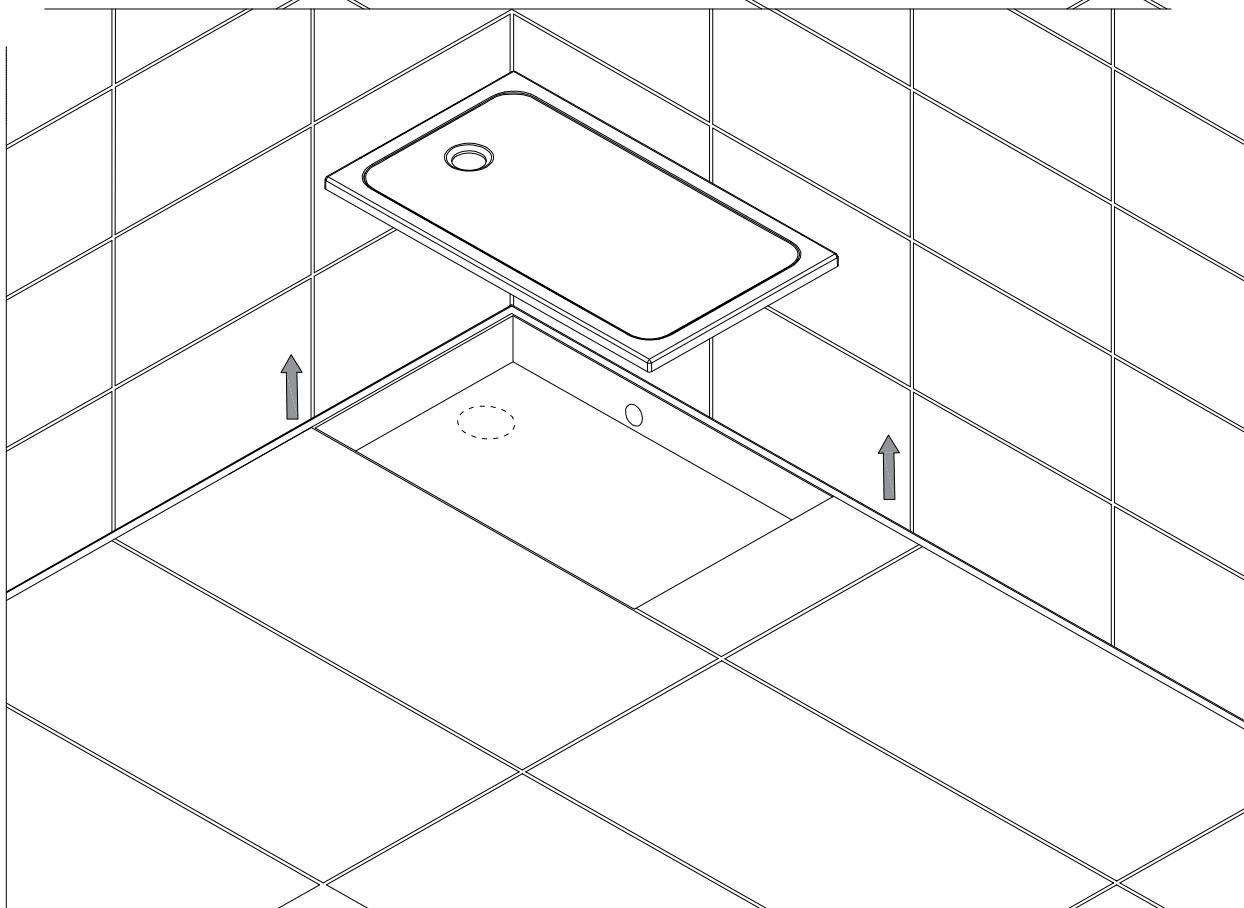




EN Assembly  
DE Installation

IT Montaggio  
RUS Сборка

TR Montaj


# 03




(02) x 1




(03) x 1



(04) x 1

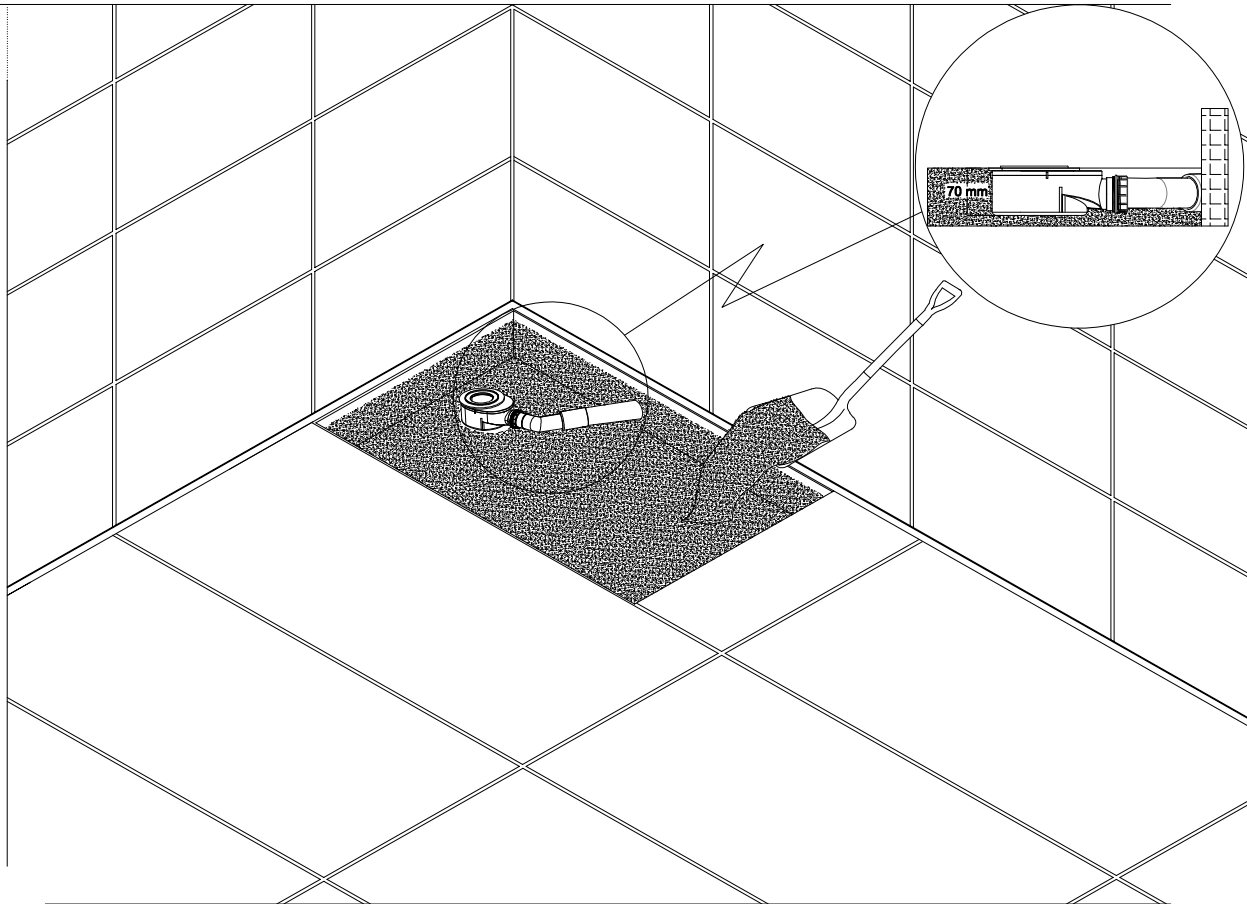

# 04

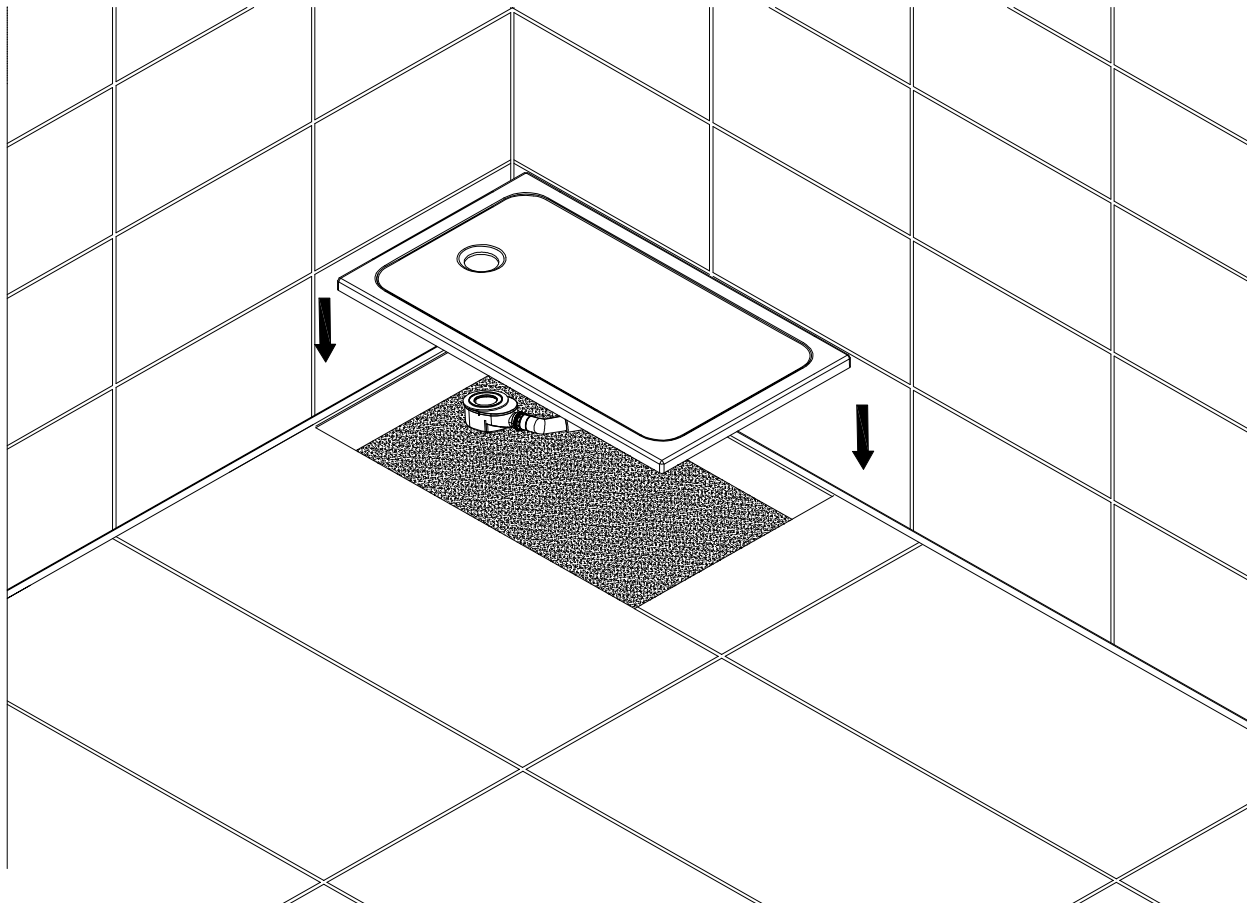




EN Assembly  
DE Installation


IT Montaggio  
RUS Сборка

TR Montaj

**05**

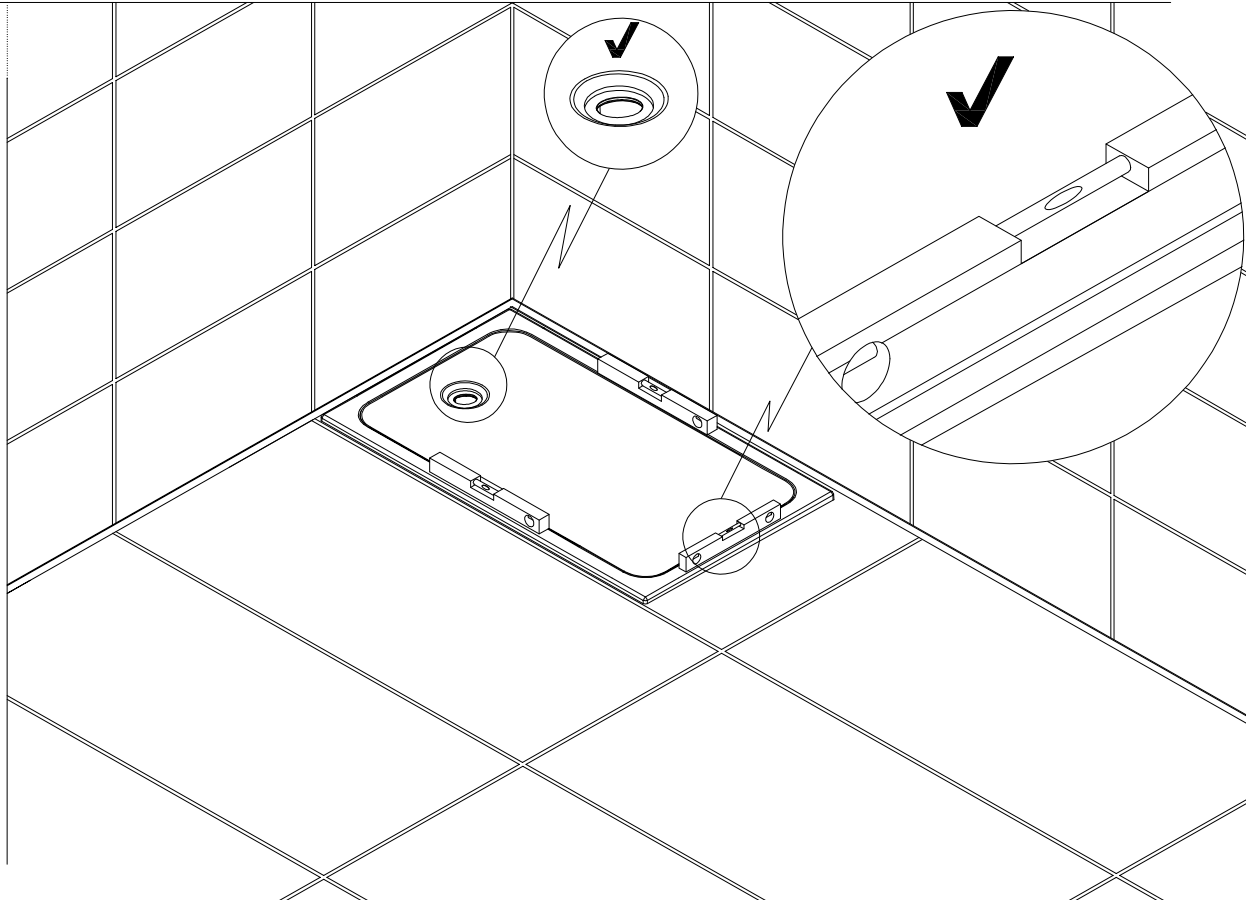

**06**

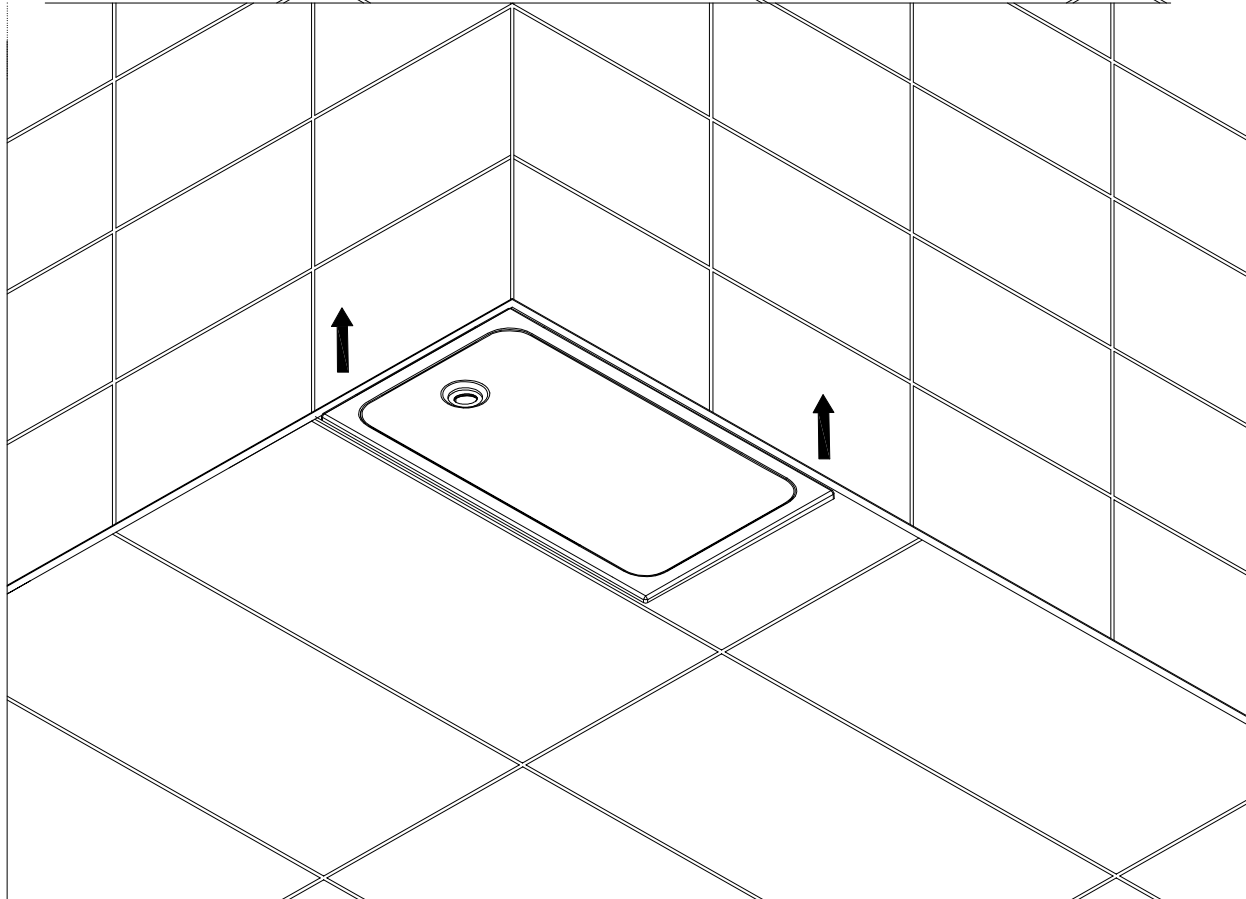




EN Assembly  
DE Installation


IT Montaggio  
RUS Сборка

TR Montaj

# 07

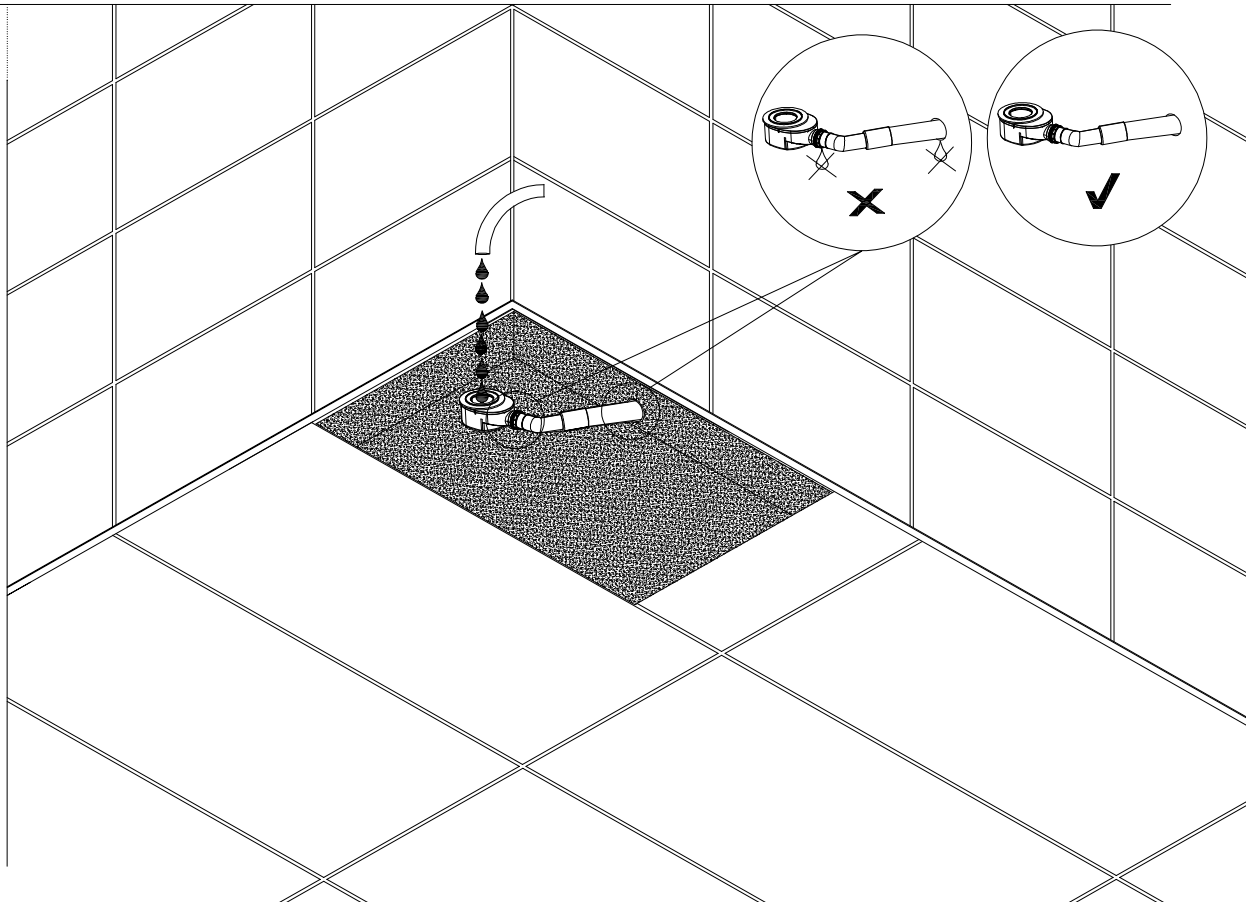


# 08



(02) x 1




(03) x 1



(04) x 1



(05) x 1

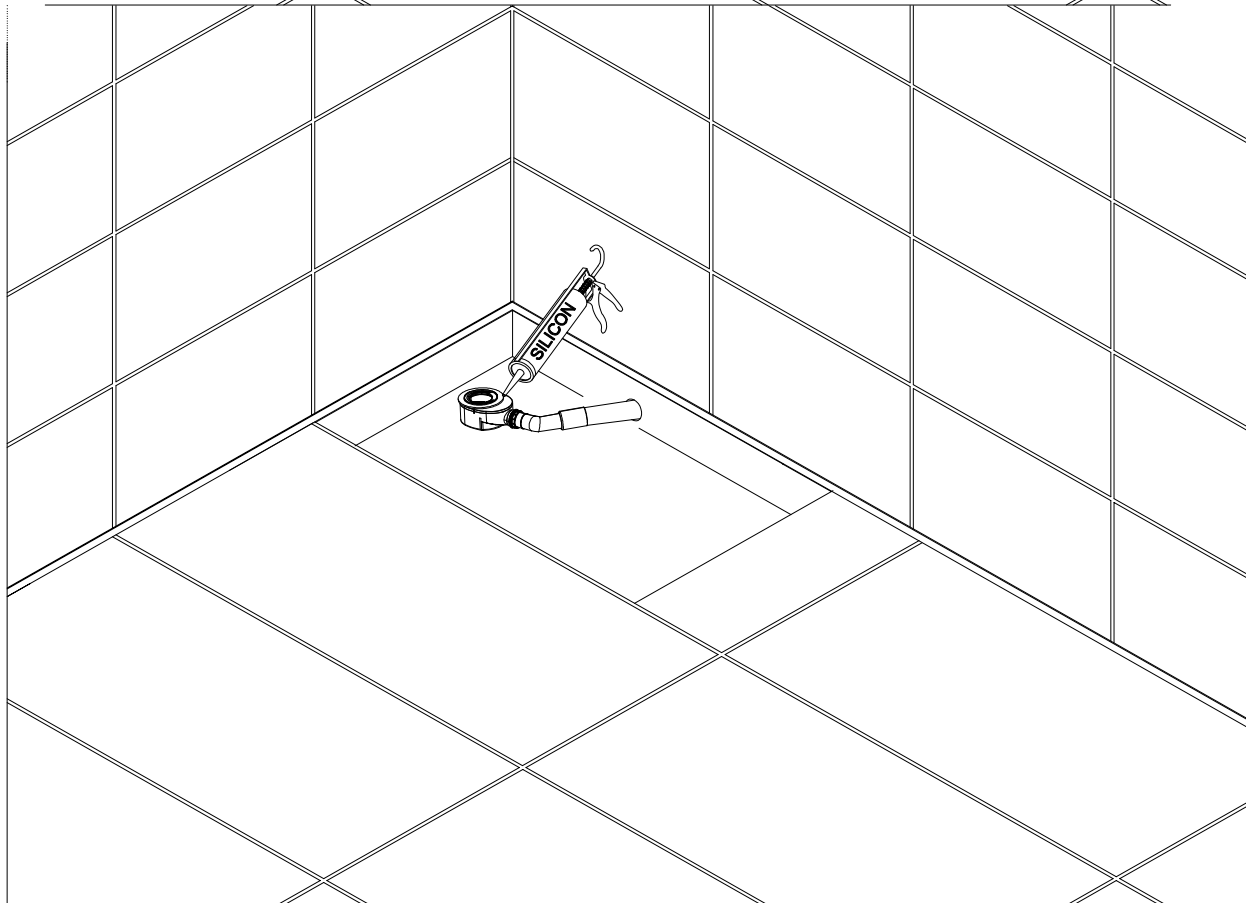




EN Assembly  
DE Installation


IT Montaggio  
RUS Сборка

TR Montaj


**09**

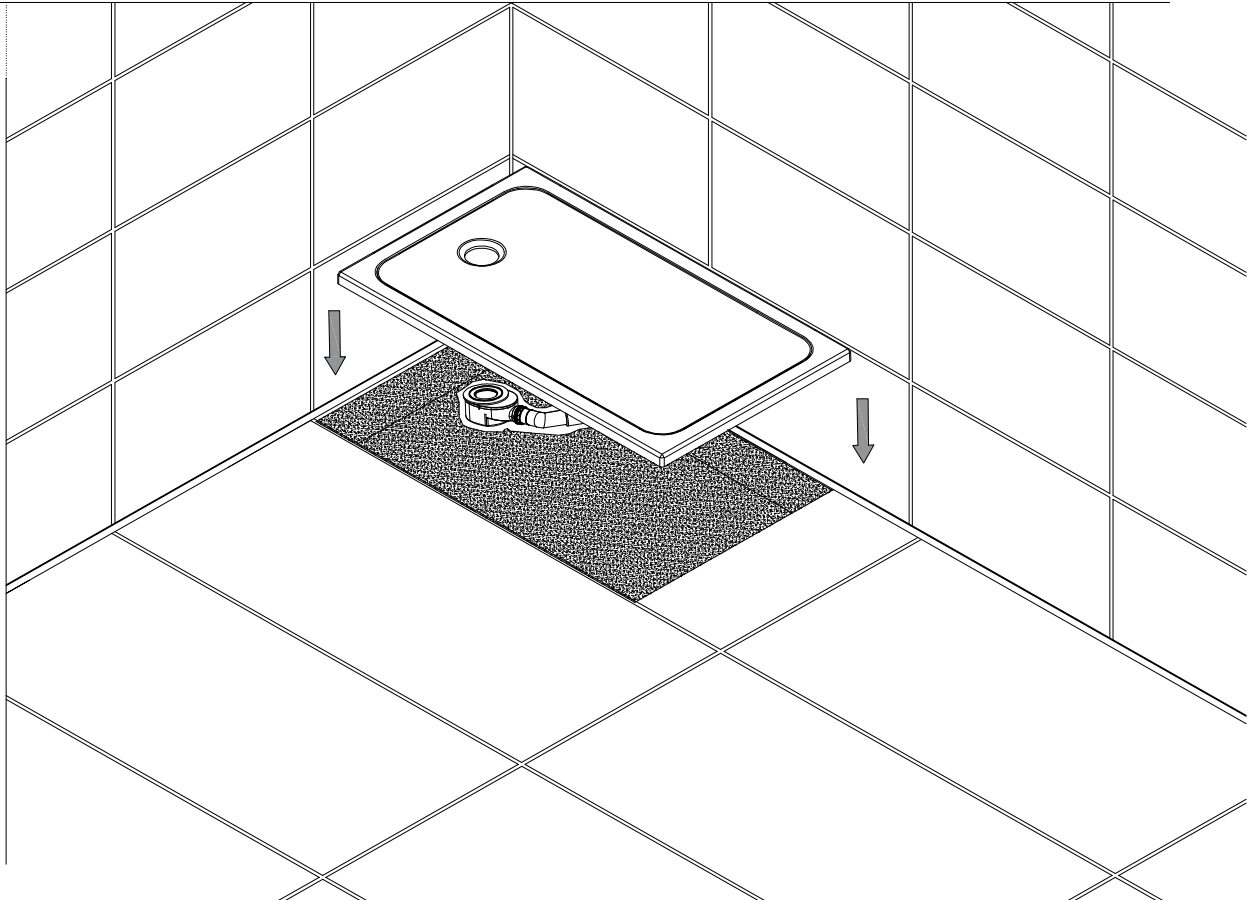


**10**



(07) x 1

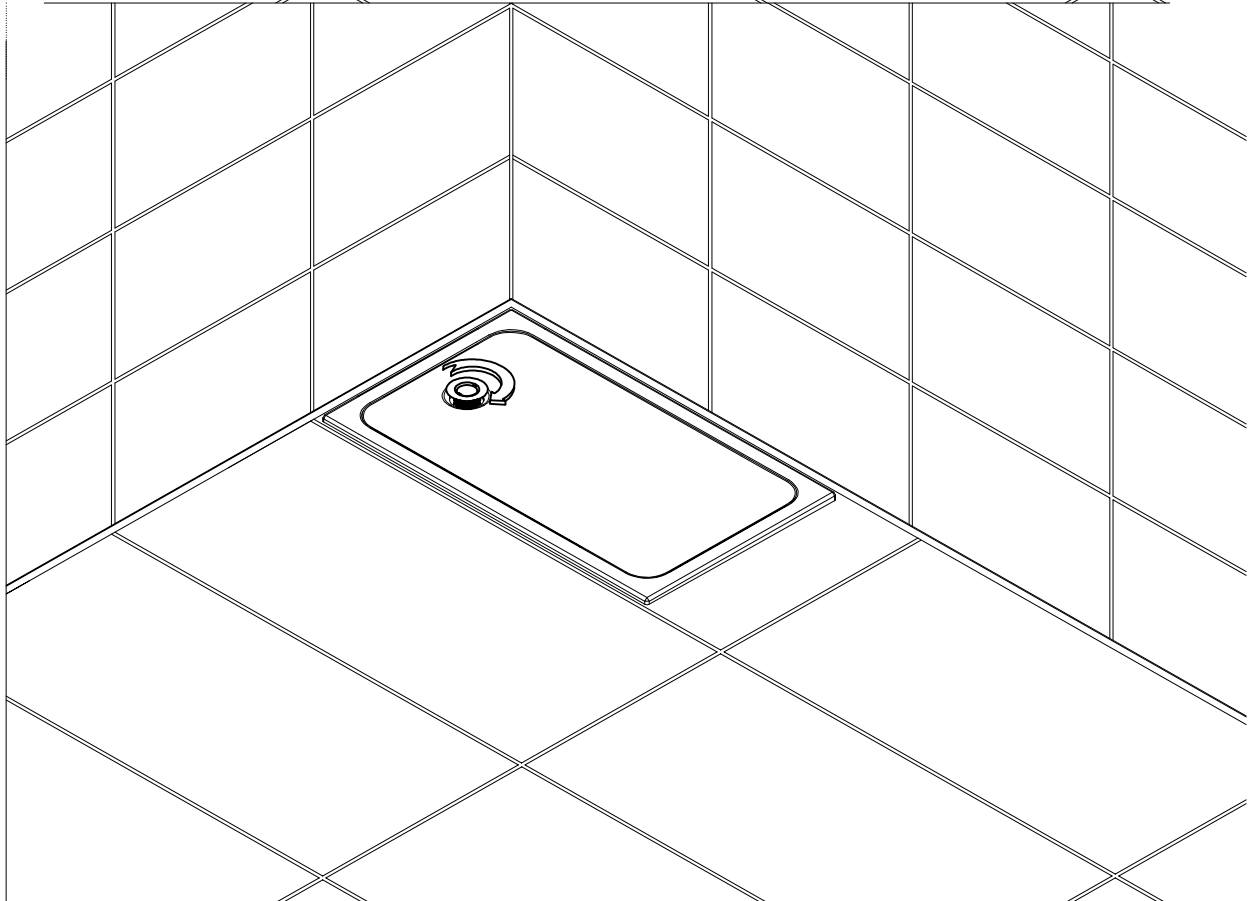







EN Assembly  
DE Installation


IT Montaggio  
RUS Сборка

TR Montaj


# 11


  
(06) x 1

  
(08) x 1

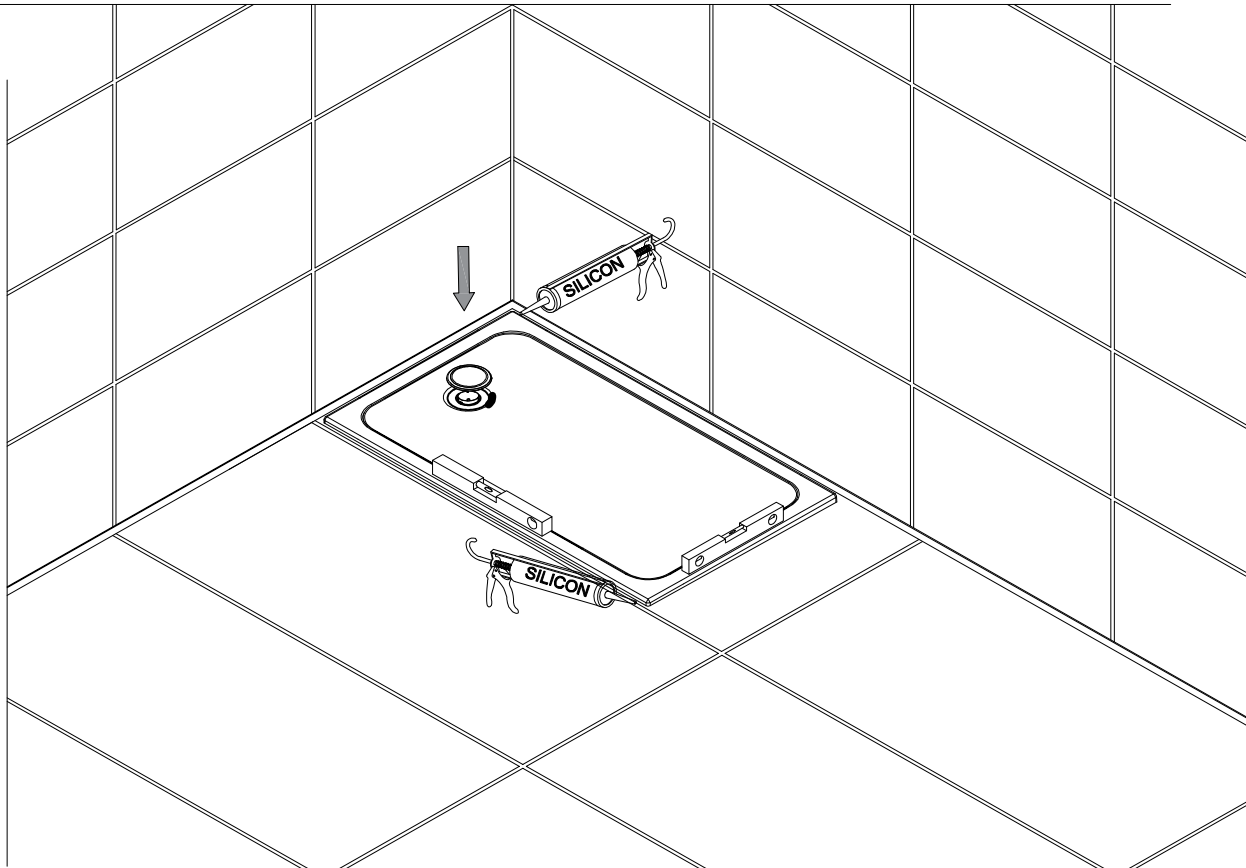

# 12

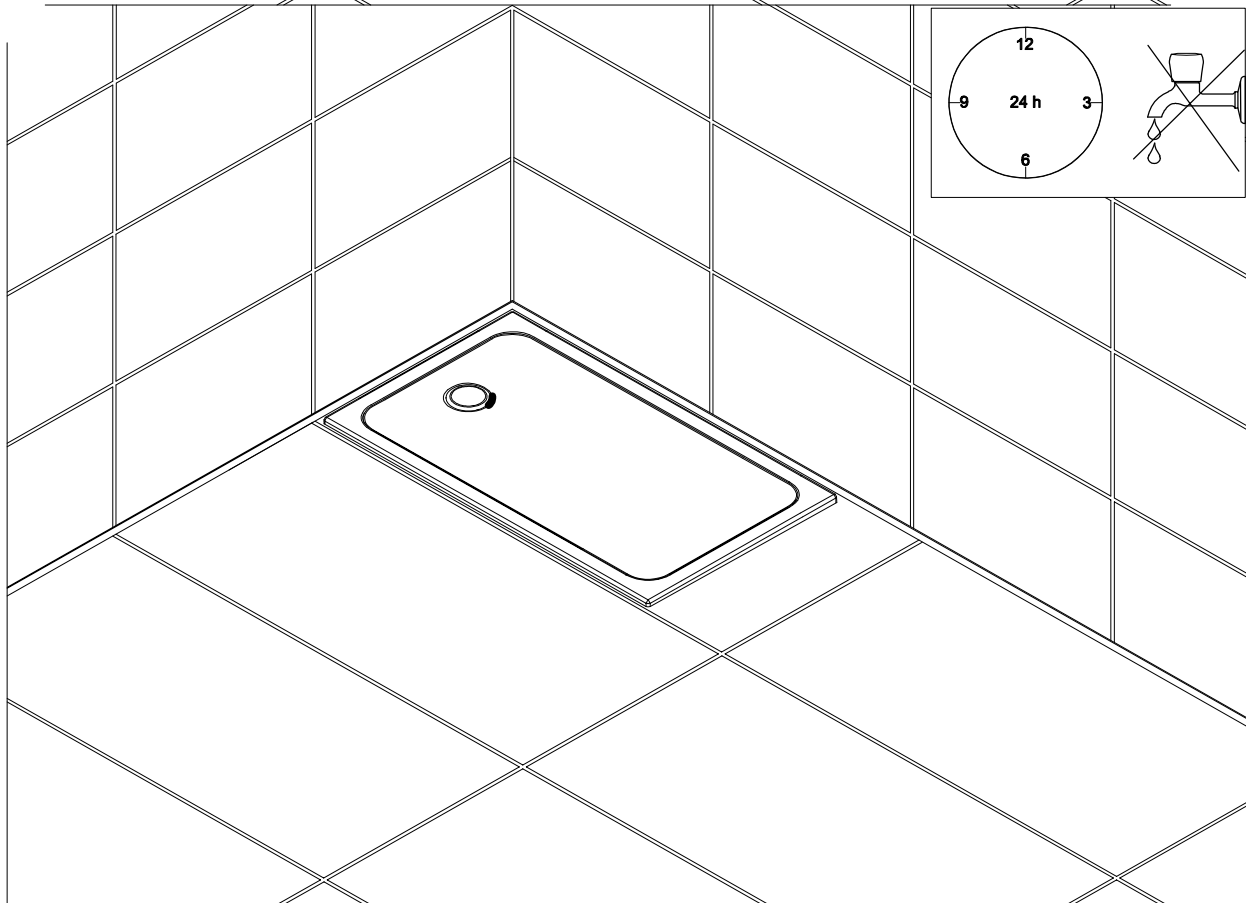

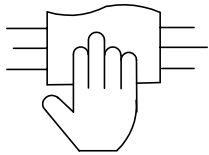

EN Care  
DE Pflege

IT Cura  
RUS Уход

TR Bakım

01

